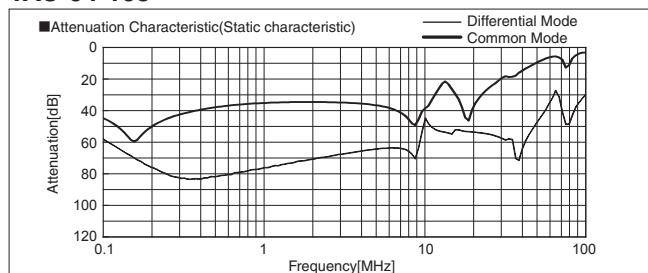
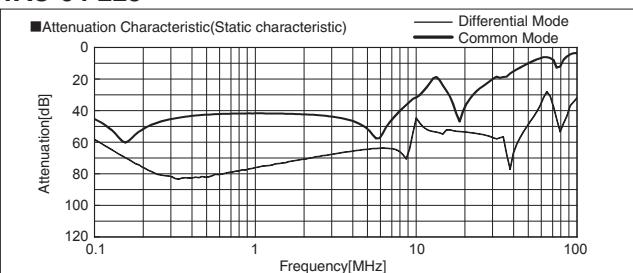
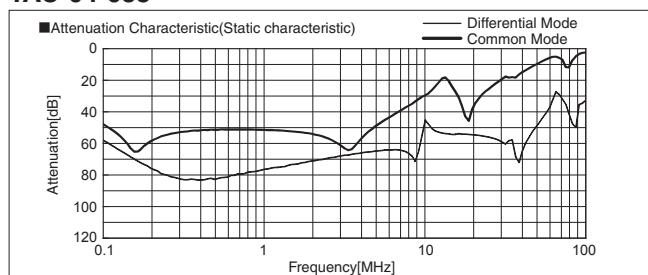
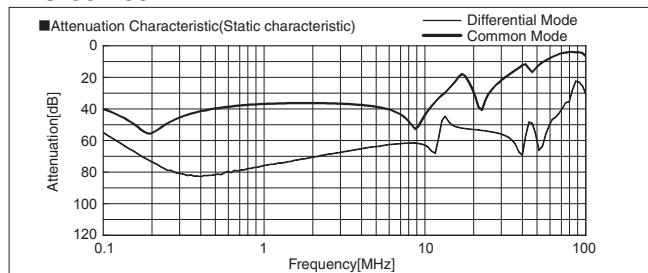
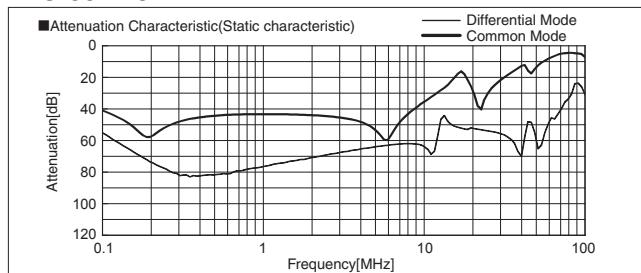
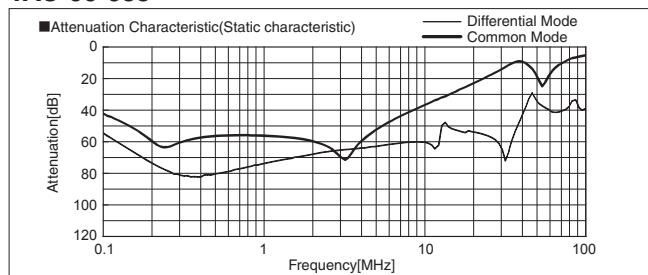
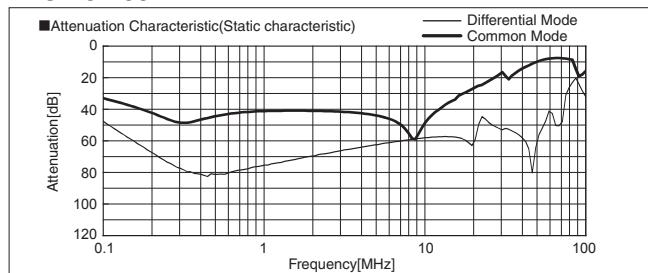
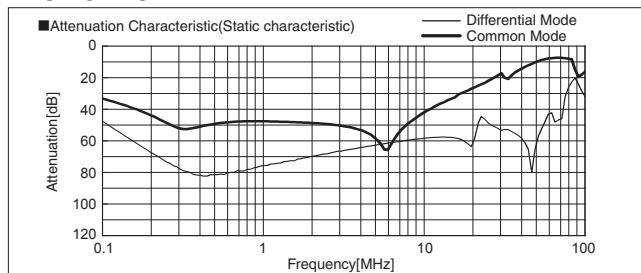
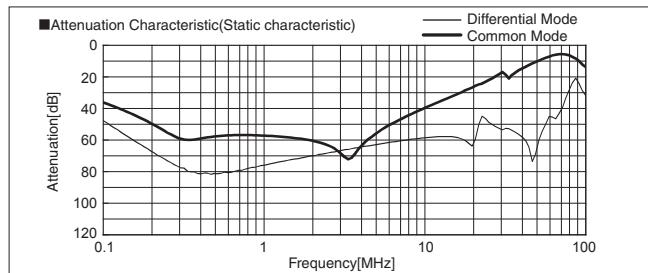
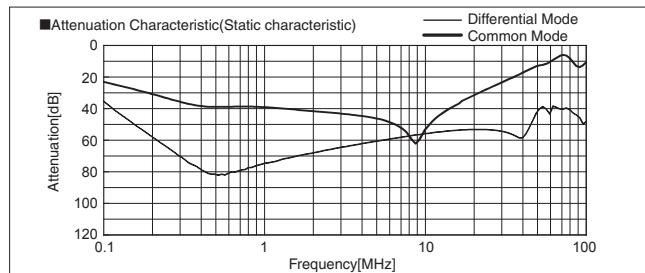
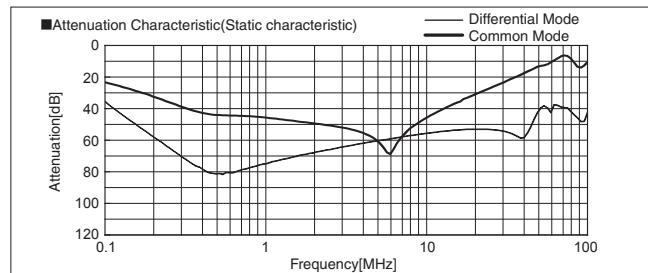
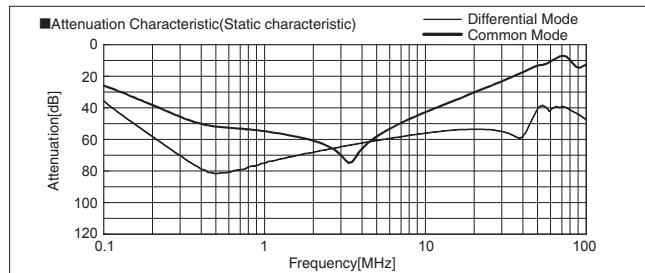
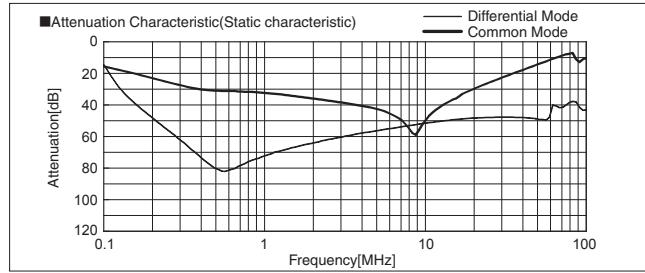
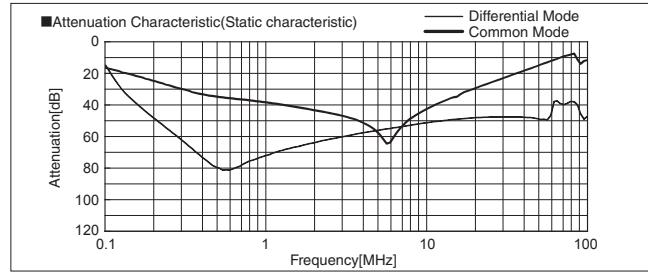
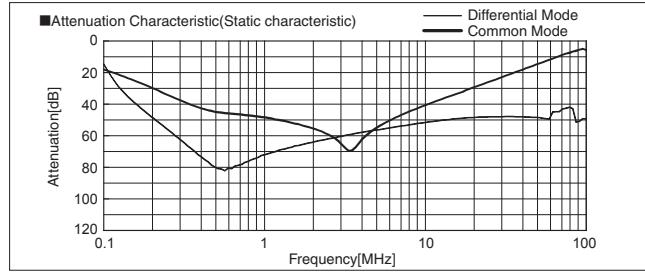
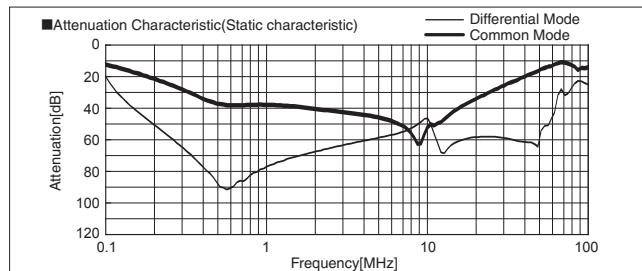
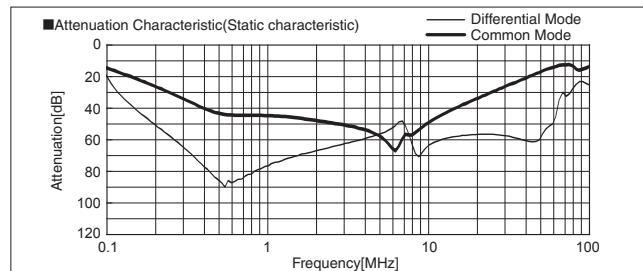
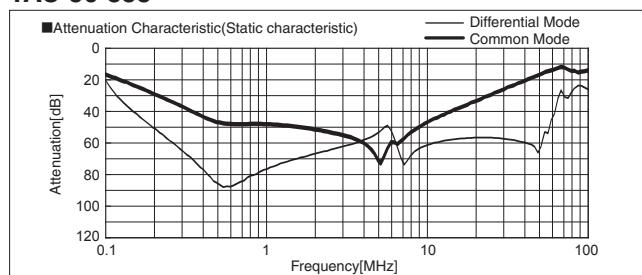
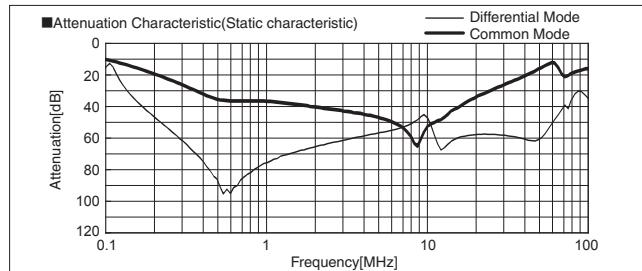
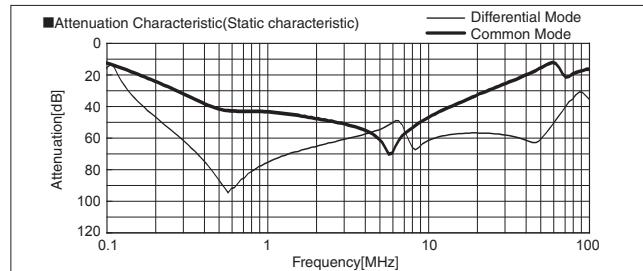
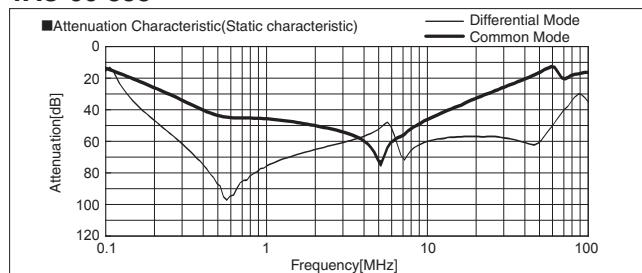
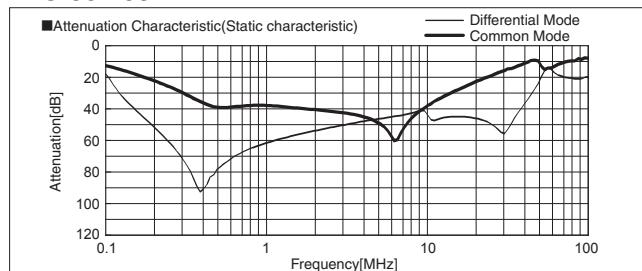
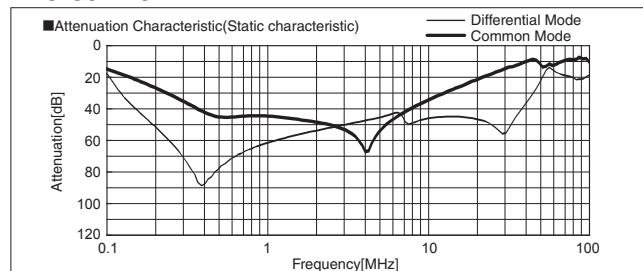
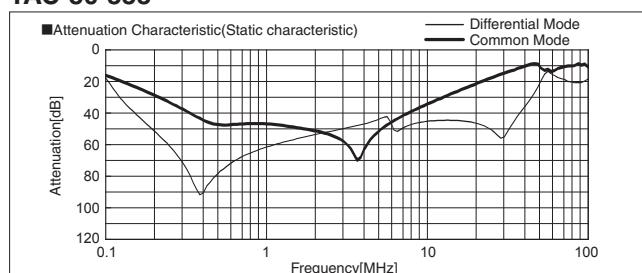
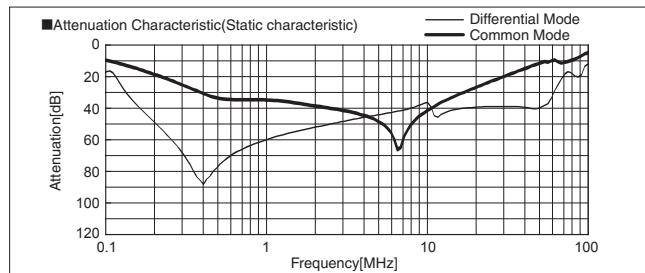
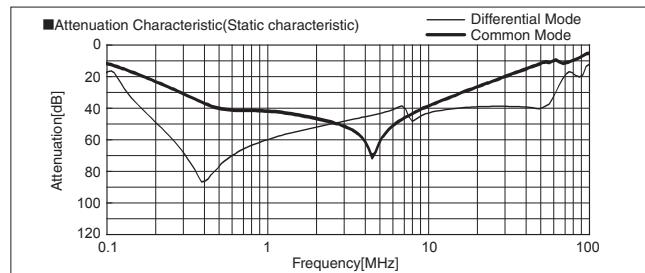
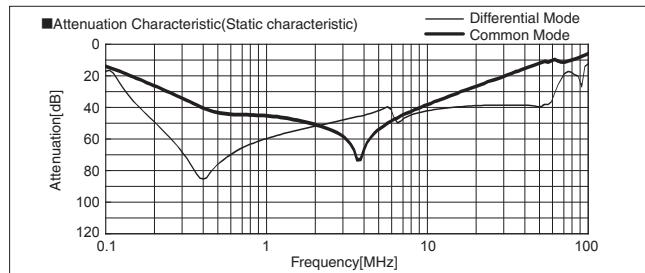
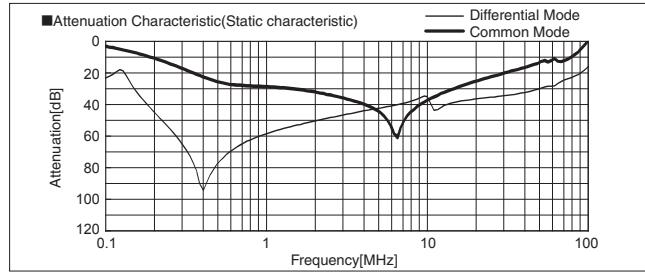
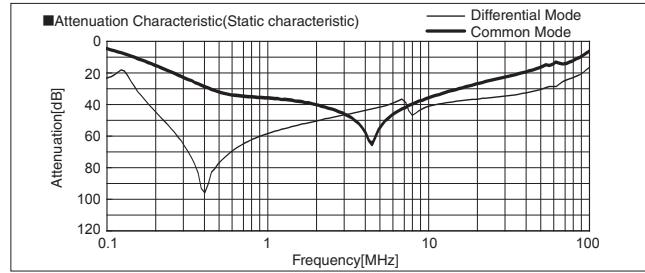
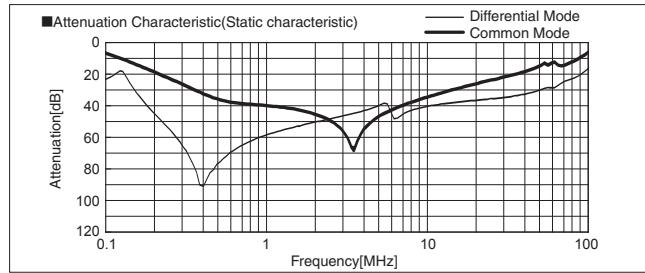
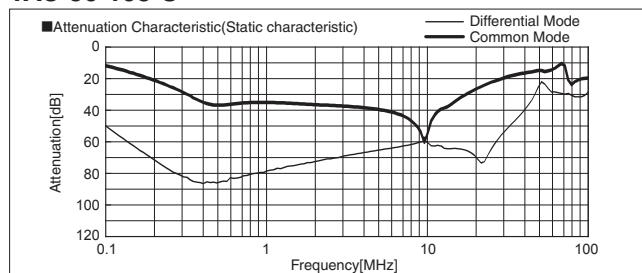
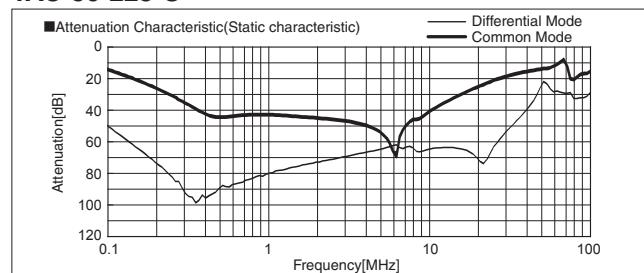
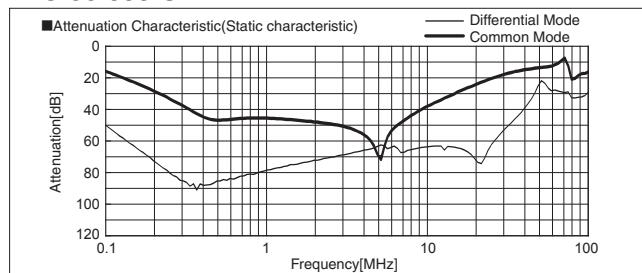
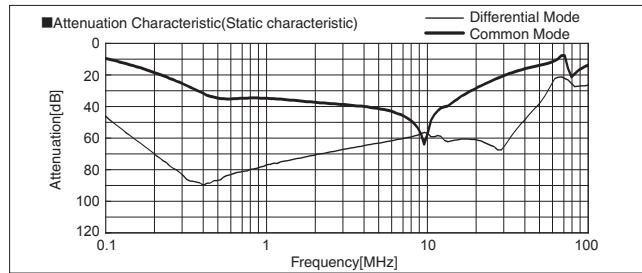
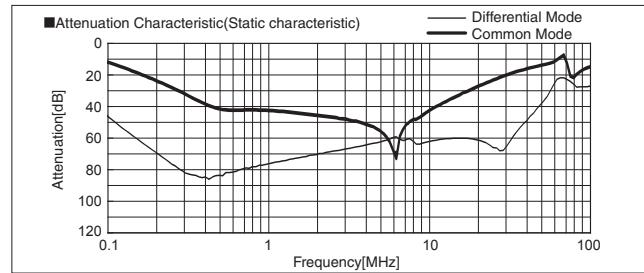
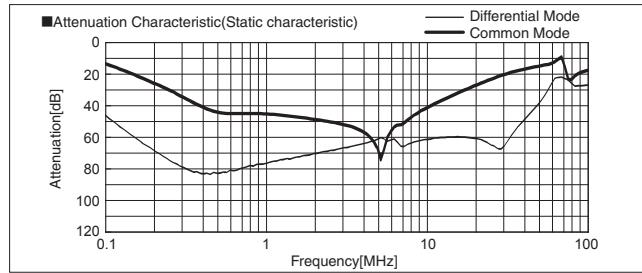
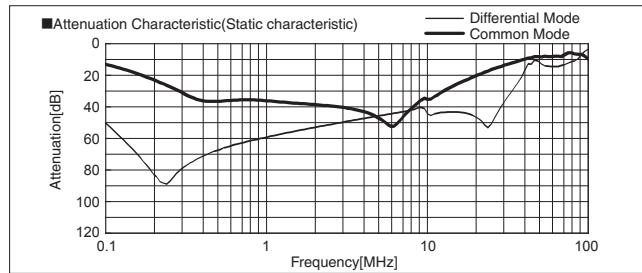
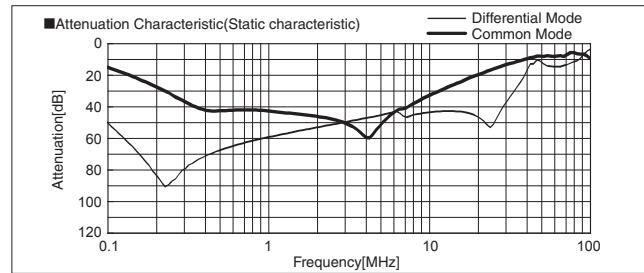
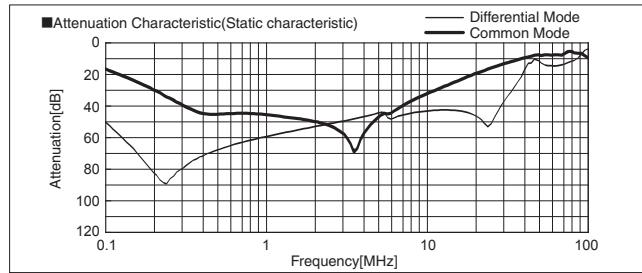








**TAC-04-103****TAC-04-223****TAC-04-683****TAC-06-103****TAC-06-223****TAC-06-683****TAC-10-103****TAC-10-223****TAC-10-683**










**TAC-20-103****TAC-20-223****TAC-20-683****TAC-30-103****TAC-30-223****TAC-30-683**










**TAC-50-103****TAC-50-223****TAC-50-333****TAC-60-103****TAC-60-223****TAC-60-333****TAC-80-103****TAC-80-223****TAC-80-333**

**TAC-100-103****TAC-100-223****TAC-100-333****TAC-150-103****TAC-150-223****TAC-150-333**

**TAC-50-103-U****TAC-50-223-U****TAC-50-333-U****TAC-60-103-U****TAC-60-223-U****TAC-60-333-U****TAC-80-103-U****TAC-80-223-U****TAC-80-333-U**

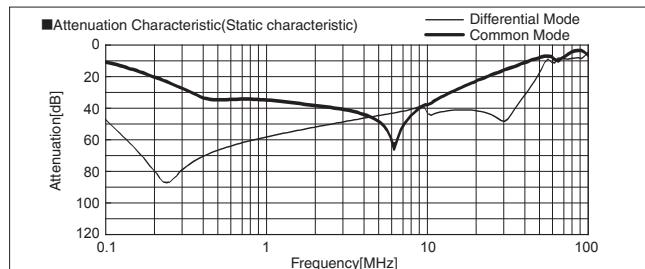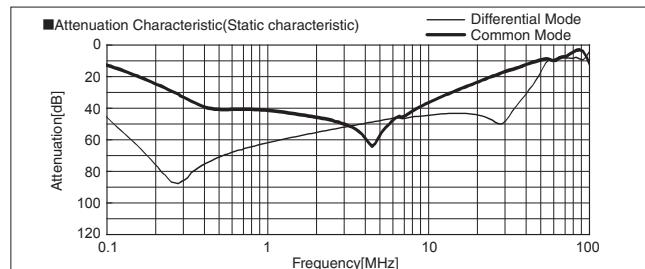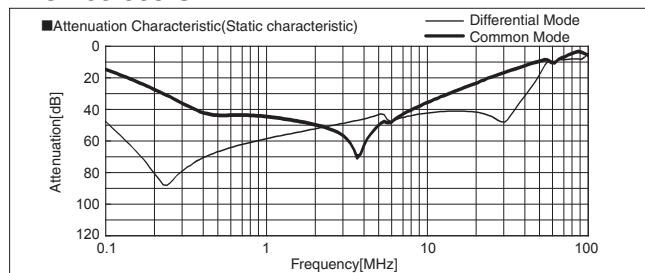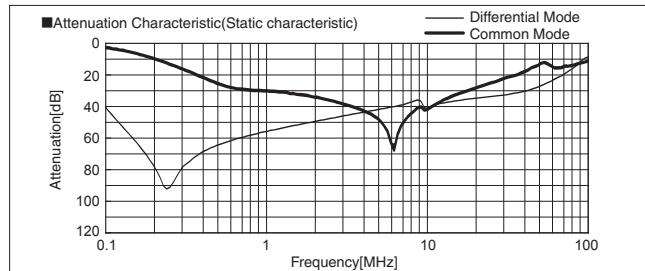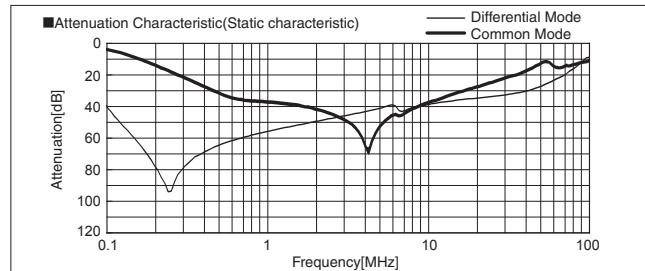
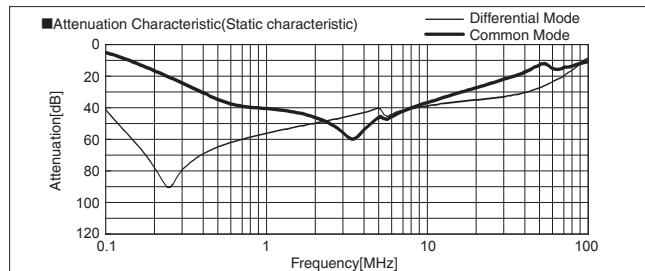
**TAC-100-103-U****TAC-100-223-U****TAC-100-333-U****TAC-150-103-U****TAC-150-223-U****TAC-150-333-U**

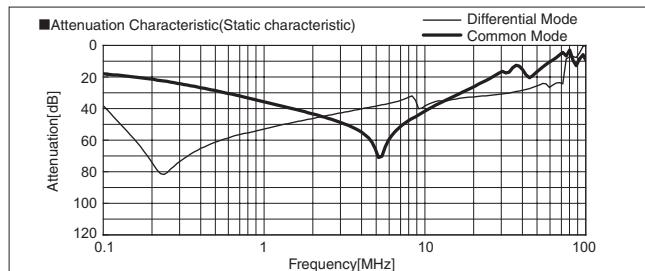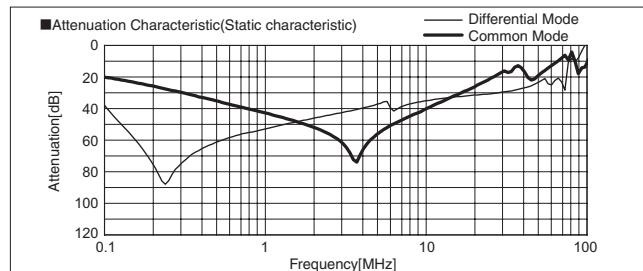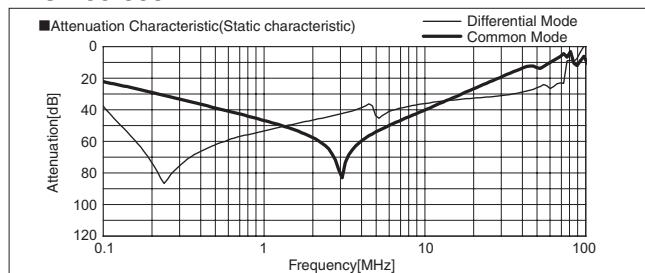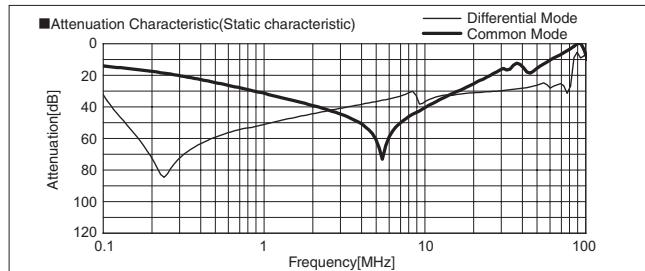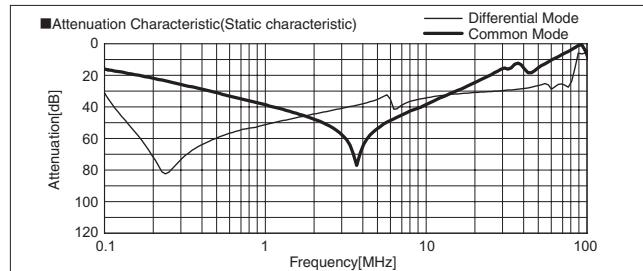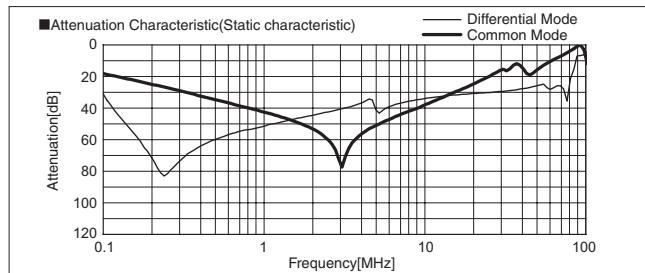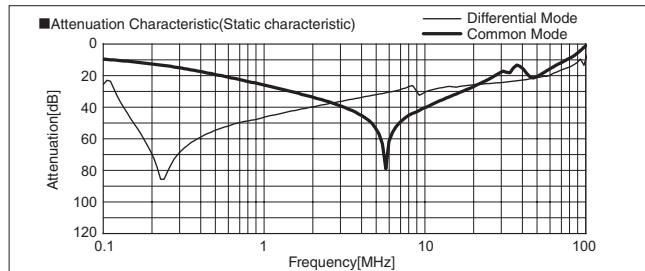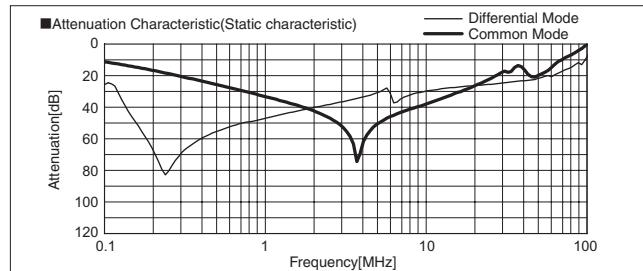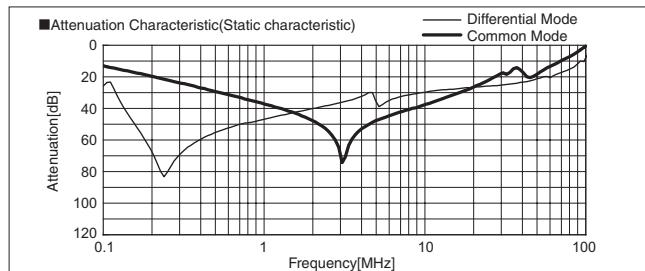**TAC-200-103****TAC-200-223****TAC-200-333****TAC-250-103****TAC-250-223****TAC-250-333****TAC-300-103****TAC-300-223****TAC-300-333**

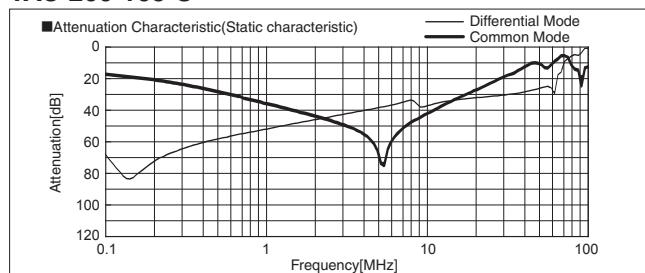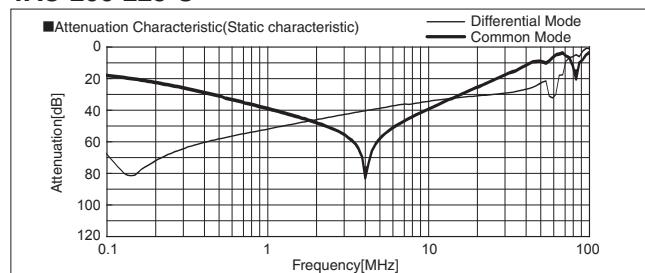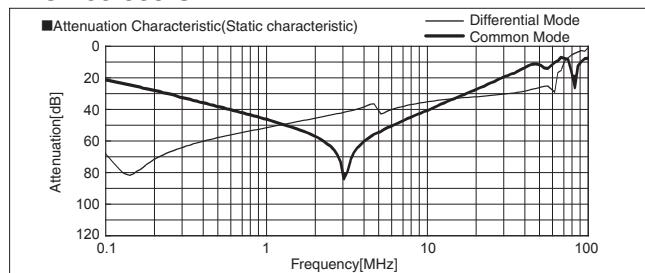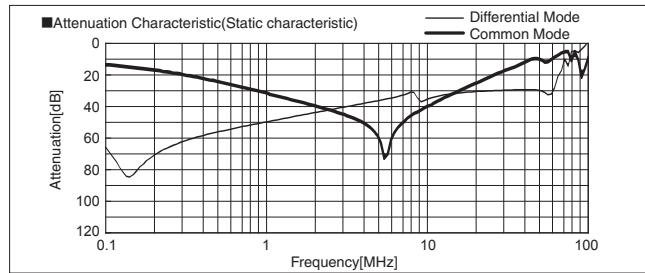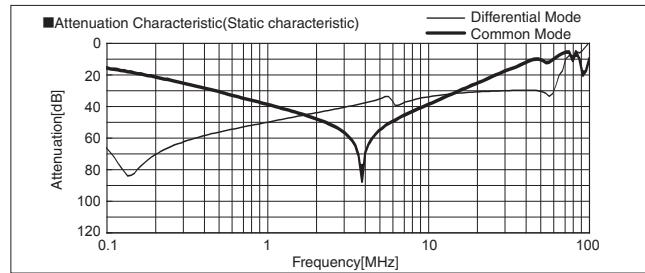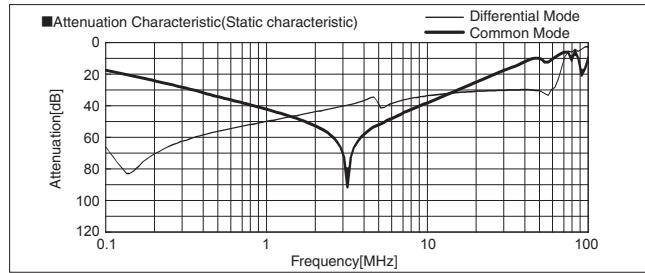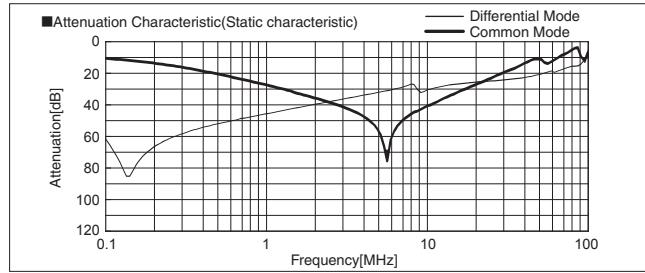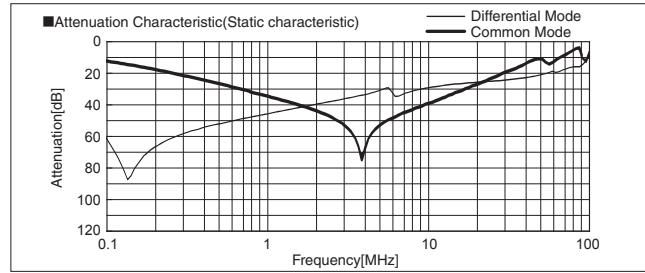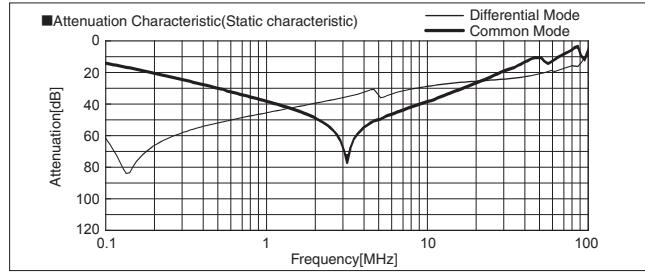**TAC-200-103-U****TAC-200-223-U****TAC-200-333-U****TAC-250-103-U****TAC-250-223-U****TAC-250-333-U****TAC-300-103-U****TAC-300-223-U****TAC-300-333-U**


## 1 Method of connecting EMI/EMC Filter

### (1) Single Phase

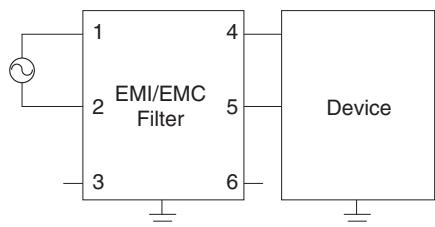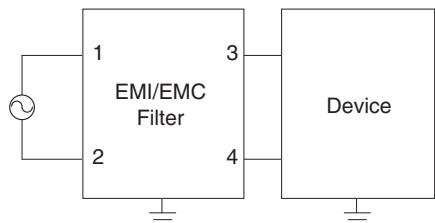


※Three phase EMI/EMC filter is also available as a single phase input type.

### (2) Three phase (Delta-connection)

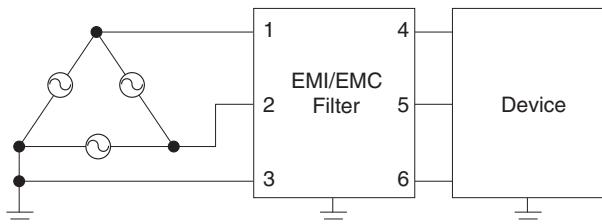

### (3) Three phase (Star-connection)

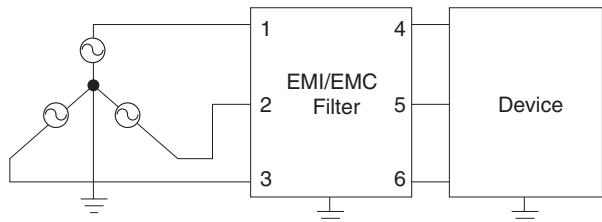

[Reference] Example of calculating input current calculation

Input voltage 400 [V]

Input capacity of the equipment 4000 [VA]

$$\text{Input current} = \frac{4000 \text{ [VA]}}{400 \text{ [V]} \times \sqrt{3}} = 5.8 \text{ [A]}$$

## 2 Caution when connecting EMI/EMC Filter

Please note the excessive temperature increase of EMI/EMC filter.  
Please contact us if judgement is difficult.

### (1) Input voltage and frequency

Please use within the rated voltage (or maximum voltage) of each model.

Input frequency specification for AC input EMI/EMC filter is considered as commercial frequency (50/60Hz).

It should not be used under the following conditions.

1) Distorted input voltage waveform.

(Triangle wave, square wave etc.)

2) High input frequency (ex: 400Hz)

### (2) Input current

Please use within the rated current of each model.

EMI/EMC filters have short term peak current capability. Therefore, it can flow ~40A or ten times of rated current, non-repeated, within a few ms such as inrush current of power supply etc.

However, it should not be used under the following conditions.


1) Long duration peak current.

2) Peak current or high-frequency current is continuously flowing.

### (3) Connection to a general-purpose inverter (servo driver)

Please connect EMI/EMC filter to input side of inverter driver (servo driver).

It should not be used between the inverter (servo driver) and the motor.

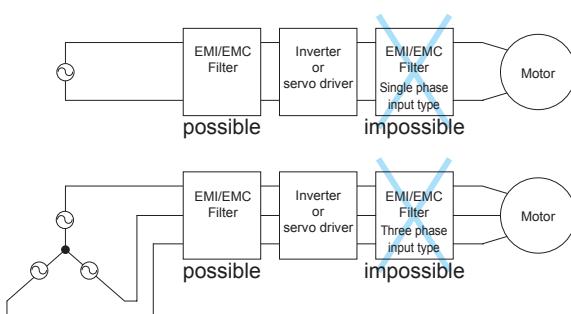


## 3 Safety Considerations


- To apply for safety standard approval using this EMI/EMC Filter, the following conditions must be met.
  - The unit must be used as a component of an end-use equipment.
  - Protection earth terminal (PE) must be connected to safety ground of end-use equipment.

## (1) Attenuation Characteristic(Static characteristic)


■ Object product : Single phase input type (Differential mode)

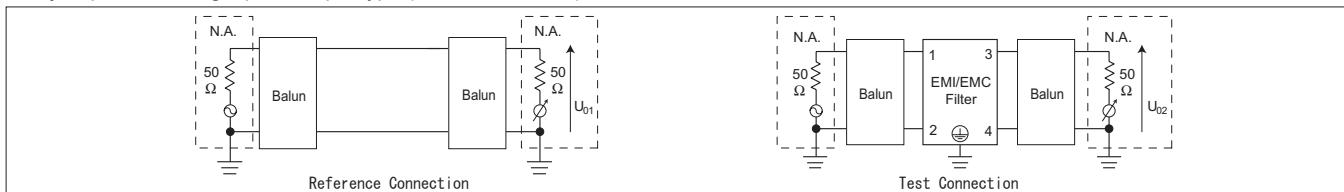


■ Object product : Single phase input type (Common mode)

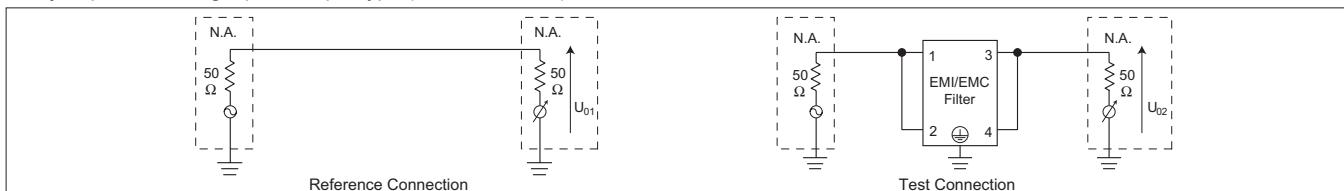


■ Object product : Three phase input type (Differential mode)

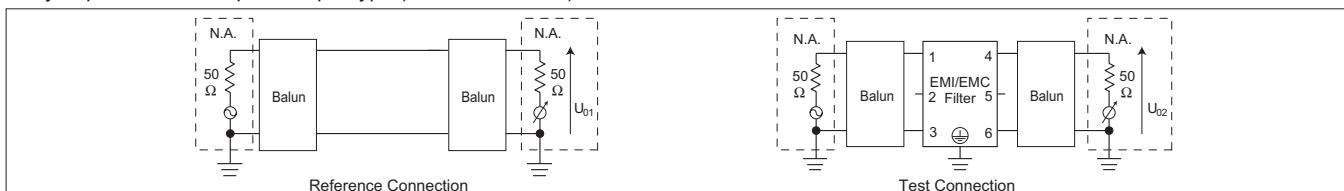


■ Object product : Three phase input type (Common mode)

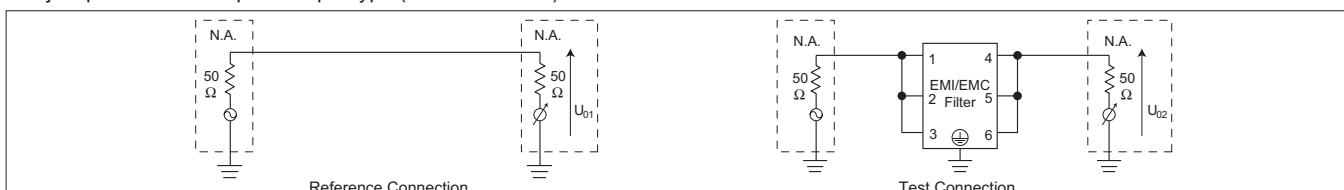


■ Object product : DC input type (Differential mode)

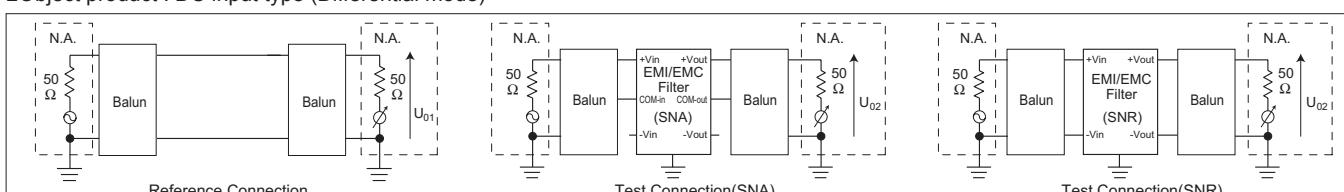

■ Object product : DC input type (Common mode)

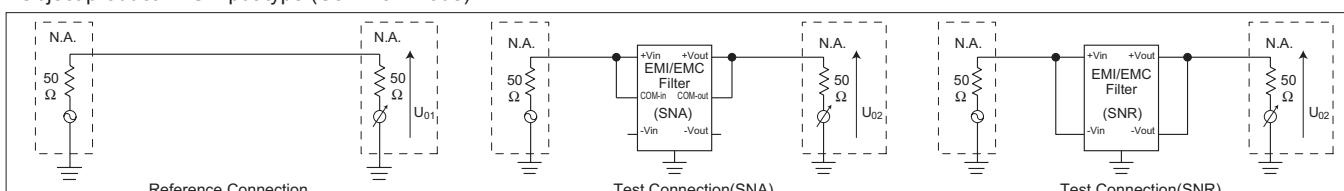

## (2) Pulse Attenuation Characteristic

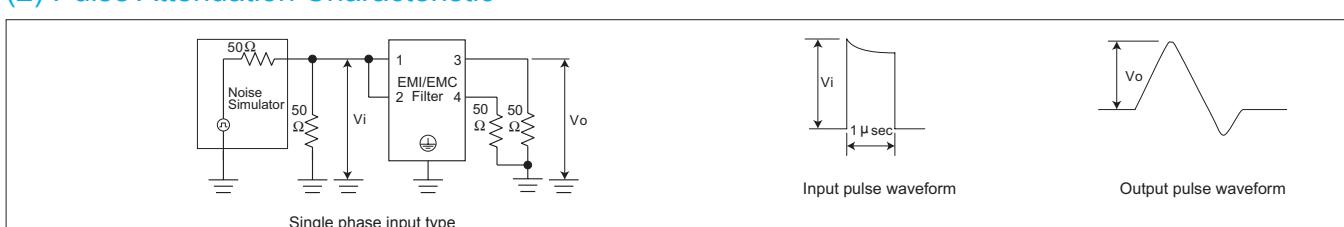

※ Attenuation =  $20\log(U_o/U_s)$  [dB]  
 $U_o$  : Voltage in state without filters  
 $U_s$  : Voltage in state which added filters  
※ N.A. : Network analyzer